

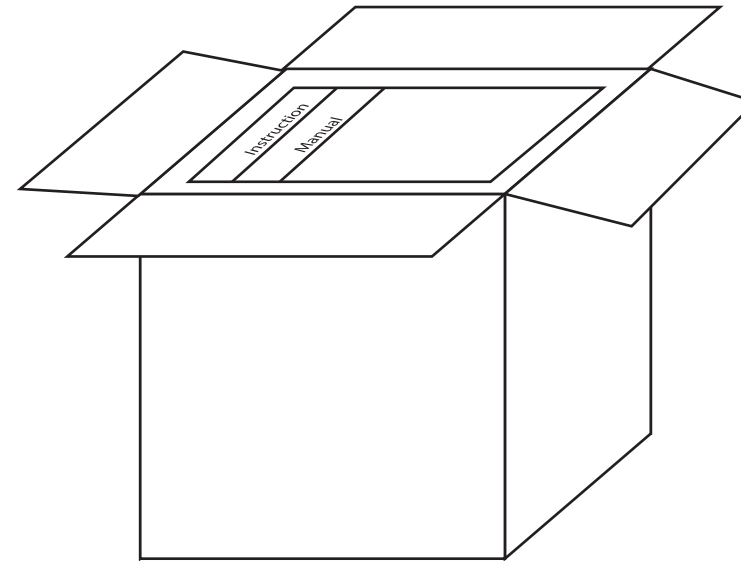
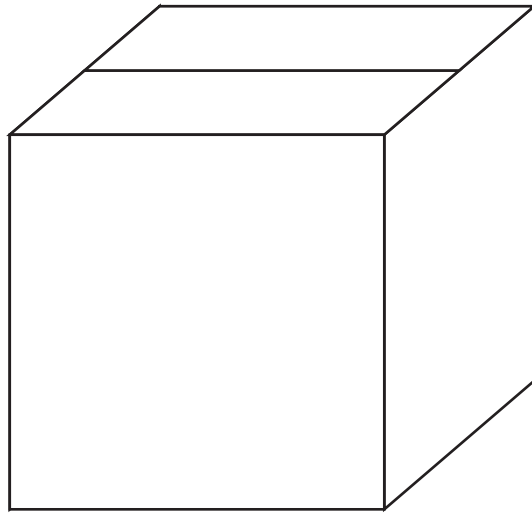


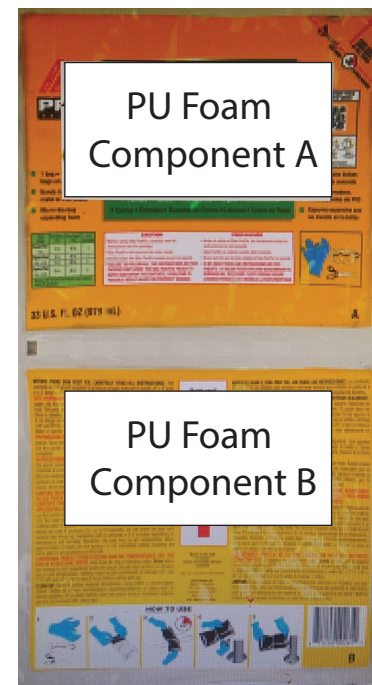

Kit

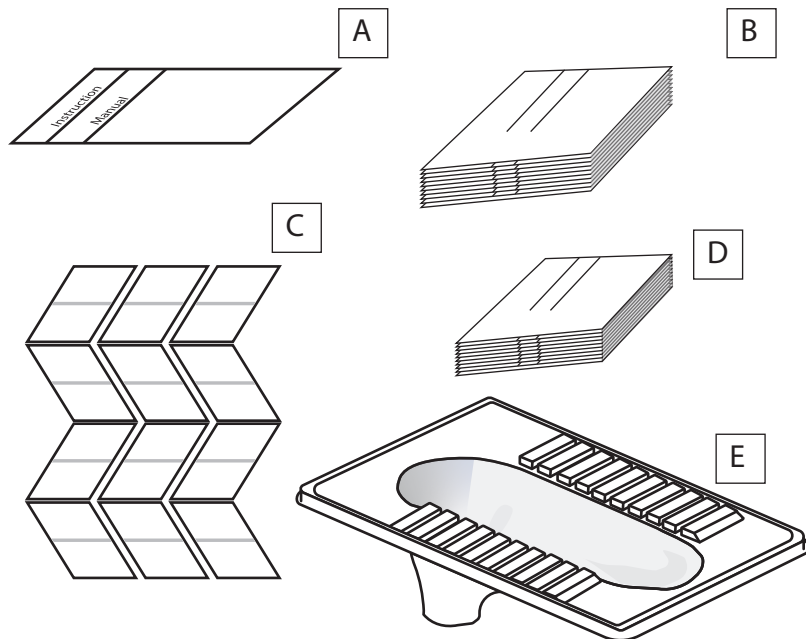

Follow the instructions
on the Sachet to mix
the foam component

C

Super Structure


B

Spread on Flat Ground


Pour inside
the template,
flatten and
wait for 5 mins




5 Mins

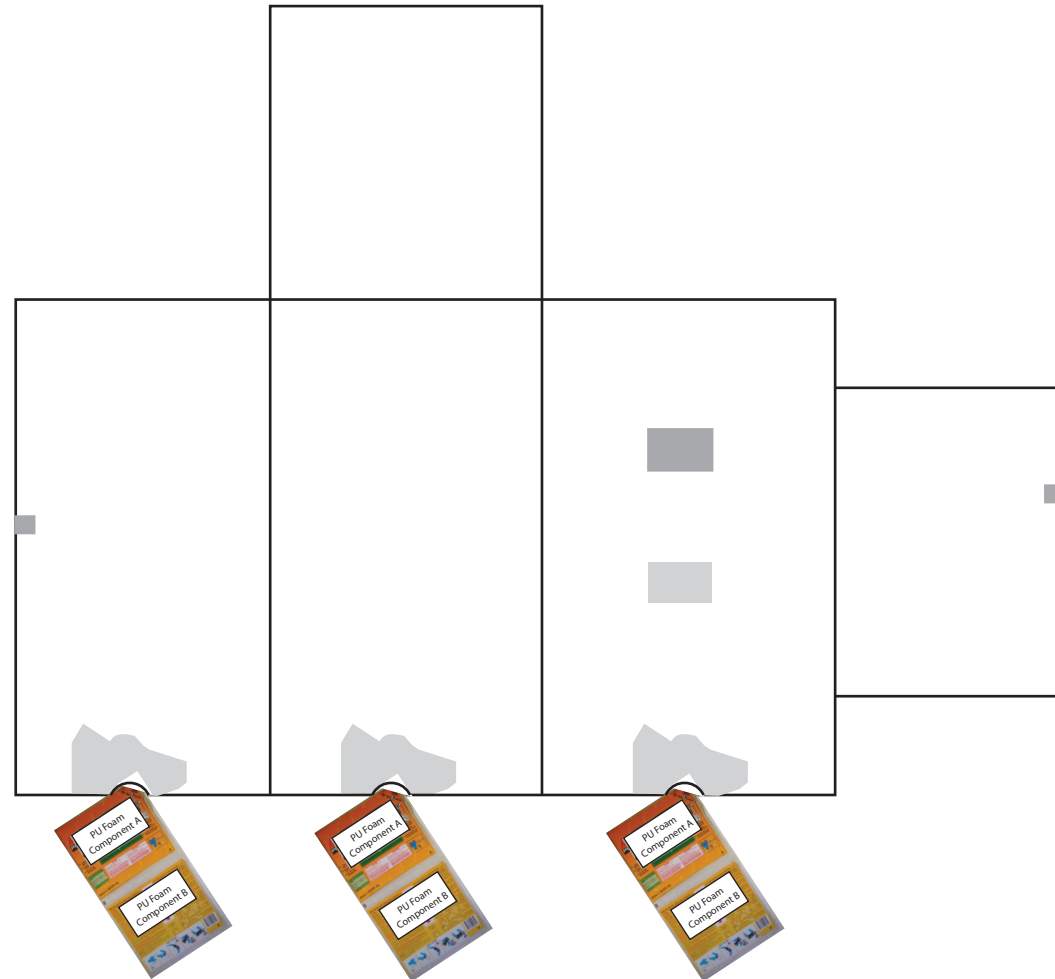

Final Assembly

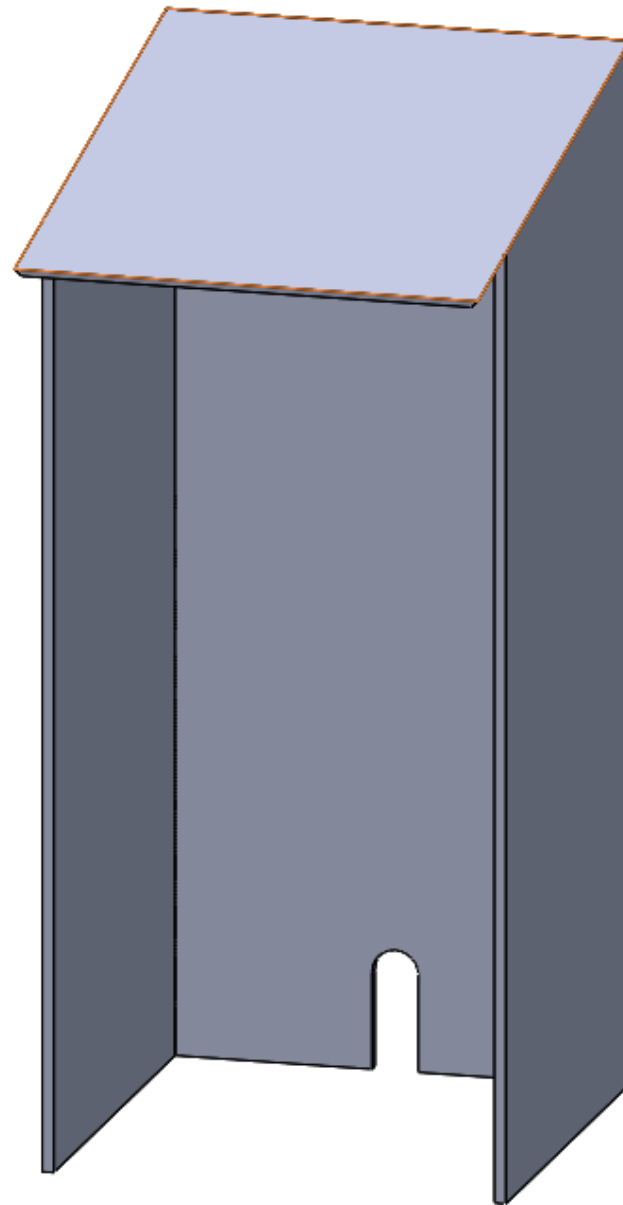


Spread on Flat Ground

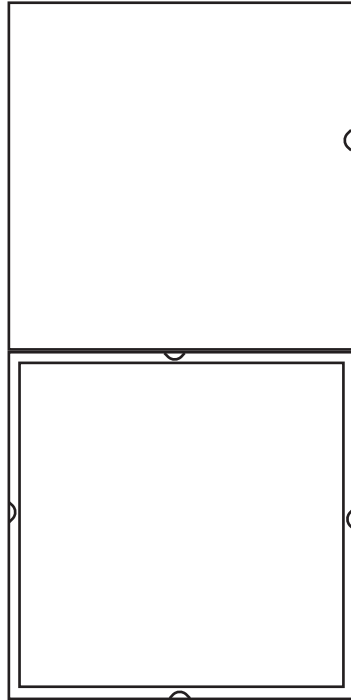

Containment

D

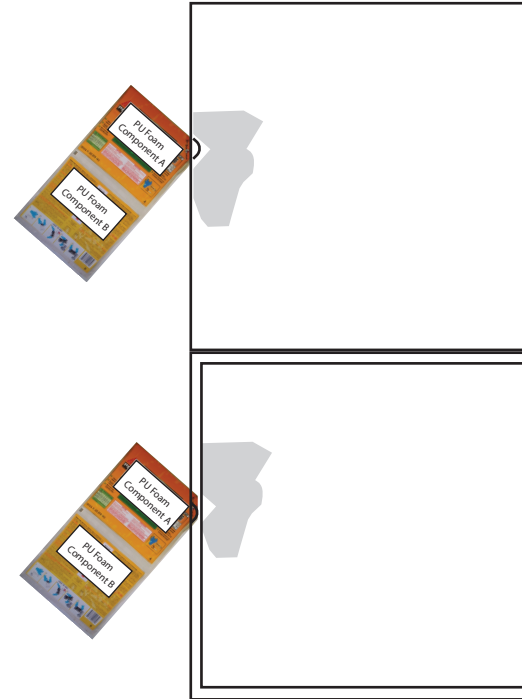

Pour inside
the template,
flatten and
wait for 5 mins


5 Mins

Final Assembly

